
# **TENGEN**

FN12-12(D)/T630-20 Indoor Medium-voltage Pressure-Operated Load Switch FN12-12R (D)/T125-31.5 Indoor Medium-voltage Pressure-Operated Load Switch – Fuse Combination Unit






- 1.2 FN12-12 (D) / T630-20 indoor pressure-operated load switch can turn on/off the load current.
- 1.3 FN12-12R (D) / T125-31.5 indoor pressure-operated load switch + fuse combination can turn on/off the load overcurrent, overload current, and line short circuit current.

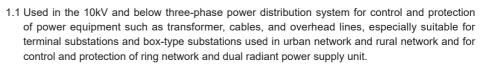

### 2 Type Designation

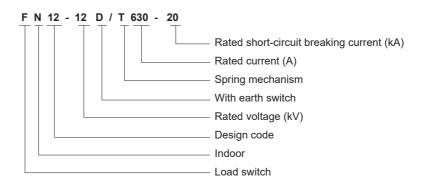



F N 12 - 12 R D / T 125 - 31.5	
	Rated short-circuit breaking current (kA)
	Max. rated current of optional fuse (A)
	Spring mechanism
	With earth switch
	With fuse
	Rated voltage (kV)
	Design code
	Indoor
	Load switch

### 3 Technical Parameters

No.	Parameter Name			Unit	FN12-12D	FN12-12RD
1	Rated voltage			kV	12	12
2	Rated frequency			Hz	50	50
3	Rated current			Α	630	125
	Rated insulation level	Power frequency withstand	ncy P/phase to phase	kV	42	42
		voltage for 1 minute	O/open contacts		48	48
4		Lighting impulse withstand	P/phase to earth, P/phase to phase		75	75
		voltage (peak)	O/open contacts		85	85
5	Rated circuit-breaker withstand current (thermal stability current)			kA	20	
6	Rated short-circuit duration (thermal stability current)  Earth switch		Load switch	S	4	
0			Earth switch		2	
7	Rated short-circuit making current (peak)		kA	50		
	Rated breaking current  Rated breaking current  5% bre		Active load breaking current	A A	630	
			Closed-loop breaking current		630	
8			5% active load breaking current		31.5	
			Cable charge current		10	
9	Breaking no-load transformer capacity		kVA	1250		
10	Rated short-circuit breaking current (current- limiting fuse)		kA		31.5	
11	Rated transfer current or take-over current		А		1200	
12	Mechanical life		times	2,000		
13	Impactor output energy		J		2~5	
14	Main circuit resistance		μΩ	≤120	≤300	
15	Fuse model					XRNT□-12

### **4 Operating Conditions**

- 4.1 Ambient temperature: Upper limit: +40°C; Lower limit: -15°C;
- 4.2 The altitude does not exceed 1,000 meters.
- 4.3 For relative air humidity, the daily mean is not greater than 95%, and the monthly mean is not greater than 90%;
- 4.4 The seismic intensity is below 8 magnitude scales.
- 4.5 Installed in places free of fire, explosive risk, chemical corrosion, and violent vibration.
- 4.6 The installation site shall be free of flammable substance, explosive risk, chemical corrosion and violent vibration.


Please contact the manufacturer for customizing those failed to follow the normal working conditions.

### 5 Features


- 5.1 This series of product features with compact structure, reasonable design, reliable interlock, and high insulation level, and its opening and closing actions are realized in the vertical straight movement way; the spring energy-storage operating mechanism is used to ensure that the opening and closing speed is not affected by the operating force applied by the operator; the electric arc will be extinguished in the bell-shaped insulating hood, and free gas will not cause the reduction of the insulation between the phases or to the ground when arcing.
- 5.2 An organic transparent insulating hood is provided between the bell-shaped hood and the support (that is the switch isolating distance) to completely isolate the live body, thus improving the protection grade of ring main unit. A reliable mechanical interlock is provided between the load switch and the ground switch, and a mechanical interlock is also installed on the switch panel with the cabinet body. Those interlocks are simple and effective without mis-operation or unintended touched.
- 5.3 This series of products use arc contact made of copper-tungsten alloy allowing that the switch is reliably conductive and has a long electrical life with advantages of easy maintenance, convenient operation, and reliable operation.

### 6 Outline and Installation Dimensions

### 6.1 Load switch

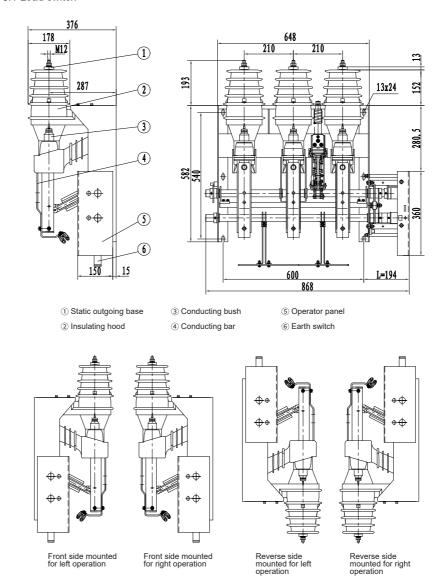


6.2 Load switch - fuse-combination unit

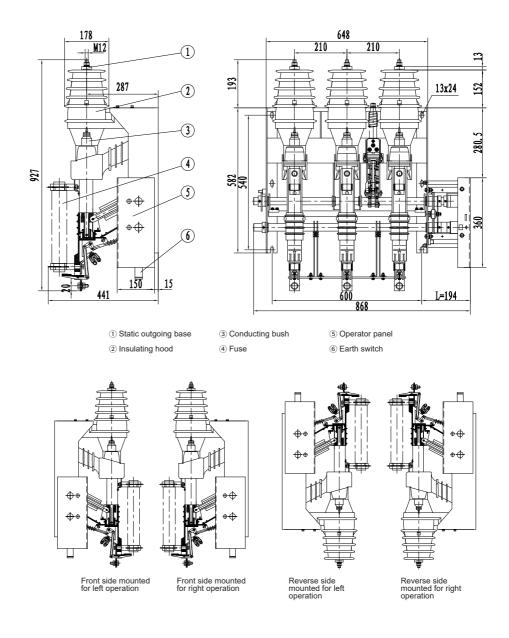


# **TENGEN**

FN12-12(D)/T630-20 Indoor Medium-voltage Pressure-Operated Load Switch FN12-12R (D)/T125-31.5 Indoor Medium-voltage Pressure-Operated Load Switch – Fuse Combination Unit

6.3 Cabinet door opening and interlock installation diagram (front side mounted for right operation)

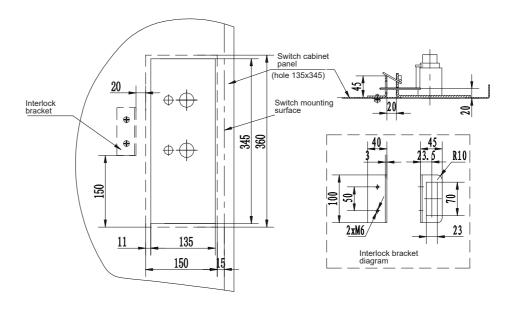



### 6.4 Diagram of holes on the baffle

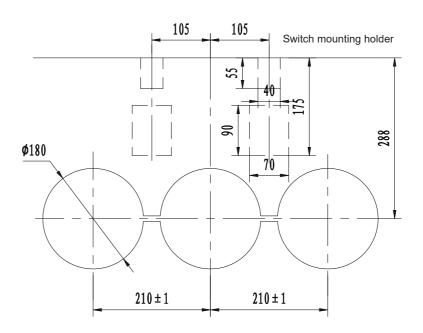

### 7 Secondary Scheme Diagram


### 7.1 Electric type

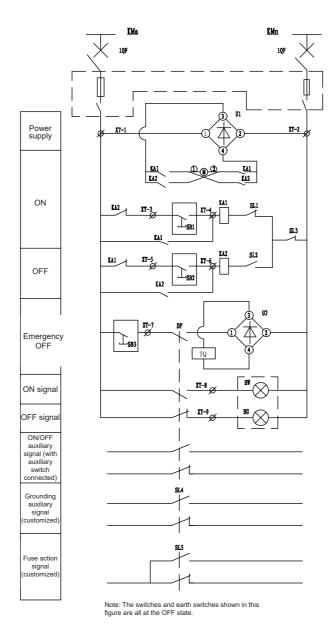

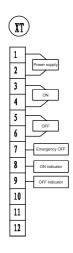

XT	Wiring terminal	1
DF	Auxiliary switch FK10 changed 1	
TQ	Trip coil	1
SL5	Fuse signal auxiliary switch LXW1-11	1
SL4	Auxiliary switch for earth switch LXW20-11M	1
SL3	Interlock travel switch for earth switch LXW2-11	1
SL2	OFF limit switch LXW2-11	1
SL1	ON limit switch LXW2-11	1
M	Motor 59ZYCJ02	1
KA2	OFF relay HH54P	1
KA1	ON relay HH54P	1
U1U2	Rectifier KBPC3510	1
	·	

7.2 Manual type with shunt release

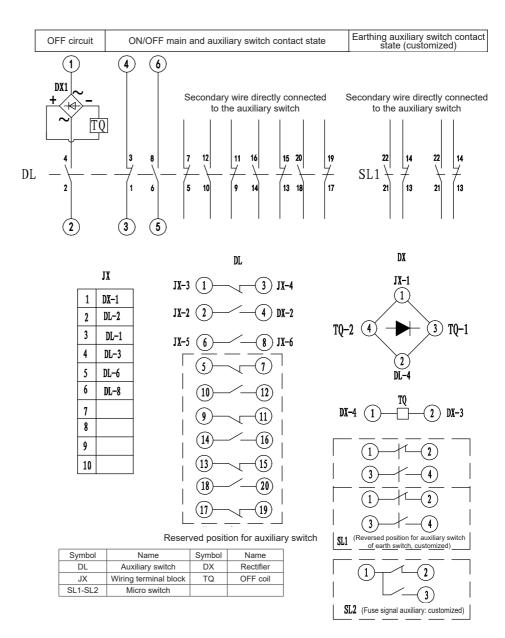

### 8 Ordering Technical Confirmation Form

## FN12-12 (RD) order technical confirmation form

Determine your requirements according to the items listed in table below:

Load switch: □FN12-12 / T630-20			
Load switch – fuse-combination unit: □FN12-12R / T125-31.5			
□Front side mounted □Reverse side mounted □Wall-mounted  Note: Side-mounted ABC phase sequence is far-middle-near layout			
□Right operation □Left operation			
□Electric	□Manual		
□AC110V □DC110V □AC220V □DC220V	Shunt coil □Yes (operating voltage V) □No (standard configuration)		
□With earth switch □Without earth switch			
□Five-ON and Five-OFF □No (standard configuration for manual mode) □Others			
□Two-ON and Two-OFF □No (standard configuration) □Others			
□TENGEN's standard scheme (see catalog) □No-standard scheme (scheme should be provided)			
□TENGEN's standard scheme (see catalog) □No-standard scheme (scheme should be provided)			
	Ordering unit (seal)  Sign:  Confirmation date:  Tel:		
	Load switch – fuse-combination    Front side mounted   Revers     Note: Side-mounted ABC phase     Right operation   Left opera     Electric     AC110V   DC110V     AC220V   DC220V     With earth switch   Without e     Five-ON and Five-OFF   No (mode)   Others     Two-ON and Two-OFF   No (mode)   TENGEN's standard scheme (scheme     TENGEN's standard scheme (scheme		

Note:
1. If not ticked, all options shall be manufactured according to the TENGEN's standard configurations.
2. The load switch – fuse combination is not equipped with a fusible core.